



Reference EIM HW/SW and plant ID for diasys.dat

You need the DiaSys.dat-File for the EIM-FSW (Plant) to record PV's with Diasys.

Note: The EIM-FSW can be read out from the CCS-Info

EIM 2-02 (B00E50201528/S0001)

FSW-Version (part number)	plant
2_1007_10_1_1_0 (X00E50207671)	5000/A3 BR 2000/4000 ECU7, EMU8
2_1007_10_1_2_0 (X00E50207671/S0001)	5000/A4 BR 2000/4000 ECU7, EMU8
2_1007_10_1_3_0 (X00E50208022)	5000/A5 BR 2000/4000 ECU7, EMU8
2_1007_10_1_4_0 (X00E50208022/S0001)	5000/A6 BR 2000/4000 ECU7, EMU8
2_1007_10_1_5_0 (X00E50208022/S0002)	5000/A7 BR 2000/4000 ECU7, EMU8
2_1007_10_1_6_0 (X00E50208022/S0003)	5000/A8 BR 2000/4000 ECU7, EMU8
2_1007_10_1_7_0 (X00E50208022/S0004)	5000/A9 BR 2000/4000 ECU7, EMU8

EIM 2-02 (B00E50201528/S0002), EIM 2-03 (B00E50206009) oder EIM5-01 (B00E50208135)

FSW-Version (part number)	plant
2_1007_10_2_0_2 (X00E50209115)	5000/A201 BR 2000/4000 ECU7, EMU8
2_1007_10_2_1_0 (X00E50209115/S0001)	5000/A202 BR 2000/4000 ECU7, EMU8
2_1007_10_2_2_0 (X00E50209115/S0002)	5000/A203 BR 2000/4000 ECU7, EMU8
2_1007_10_2_3_0 (X00E50209115/S0003)	5000/A204 BR 2000/4000 ECU7, EMU8
2_1007_10_10_4_0 (X00E50209829)	5000/A302 BR 1163 ECU9, EMU8
2_1007_20_1_0_1 (X00E50210343)	5000/A303 BR 1163 ECU9, EMU8
2_1007_20_1_1_0 (X00E50210343/S0001)	5000/A304 BR 1163 ECU9, EMU8
2_1007_30_1_0_2 (X00E50210345)	5000/A500 BR 1600/2000/4000 ECU9, EMU8
2_1007_30_1_1_2 (X00E50210345/S0001)	5000/A501 BR 1600/2000/4000 ECU9, EMU8

EIM3-01 (X00E50211432) oder EIM6-01 (B00E50208137)

FSW-Version (part number)	plant
2_1007_10_3_0_0 (X00E50211567)	5000/A205 BR 2000/4000 ECU7, EMU8
2_1007_30_2_0_1 (X00E50211699)	5000/A502 BR 1600/2000/4000 ECU9, EMU8
2_1007_50_2_2_1 (X00E50211546)	5000/A600 BR 4000 Red. ECU7, EMU9
2_1007_50_2_2_7 (X00E50211546/S0001)	5000/A601 BR 4000 Red. ECU7, EMU9
2_1007_70_1_0_6 (X00E50211701)	5000/A800 BR 4000 Gas ECU9, EMU9, CPM
2_1007_70_1_1_2 (X00E50211701/S0001)	5000/A801 BR 4000 Gas ECU9, EMU9, CPM
2_1007_70_1_2_1 (X00E50211701/S0002)	5000/A802 BR 4000 Gas ECU9, EMU9, CPM
2_1007_70_1_3_0 (X00E50211701/S0003)	5000/A803 BR 4000 Gas ECU9, EMU9, CPM
2_1007_80_1_0_1 (X00E50212562)	5000/A900 BR 4000-05 ECU9, EMU9, ESD
2_1007_80_1_1_0 (X00E50212562/S0001)	5000/A901 BR 4000-05 ECU9, EMU9, ESD
2_1007_90_1_0_1 (X00E50212562)	5000/A150 BR 2000 ECU4, EMU1, SXU



Reference EIM HW/SW and plant ID for diasys.dat

2_1007_90_1_1_1 (X00E50212562/S0001)	5000/A151 BR 2000	ECU4, EMU1, SXU
2_1007_90_1_2_1 (X00E50212562/S0002)	5000/A152 BR 2000	ECU4, EMU1, SXU
2_1007_90_1_3_0 (X00E50212562/S0003)	5000/A153 BR 2000	ECU4, EMU1, SXU
2_1007_100_1_0_3 (X00E50212345)	5000/A250 BR 4000	ECU7, EMU8, SXU
2_1007_100_1_1_0 (X00E50212345/S0001)	5000/A251 BR 4000	ECU7, EMU8, SXU
2_1007_100_1_2_1 (X00E50212345/S0002)	5000/A252 BR 4000	ECU7, EMU8, SXU

EIM10-01 (X00E50212034)

FSW-Version (part number)	plant
2_1607_10_1_0_2 (X00E50212554)	5000/A206 BR 2000/4000 ECU7, EMU8
2_1607_10_1_1_1 (X00E50212554/S0001)	5000/A210 BR 2000/4000 ECU7, EMU8
2_1607_20_1_0_5 (X00E50212556)	5000/A310 BR 1163 ECU9, EMU8
2_1607_30_1_0_7 (X00E50212554)	5000/A503 BR 1600/2000/4000 ECU9, EMU8
2_1607_30_1_1_0 (X00E50212554/S0001)	5000/A510 BR 1600/2000/4000 ECU9, EMU8
2_1607_50_1_0_5 (X00E50212558)	5000/A602 BR 4000 Red. ECU7, EMU9
2_1607_70_1_0_3 (X00E50212560)	5000/A810 BR 4000 Gas ECU9, EMU9, CPM
2_1607_70_1_1_0 (X00E50212560/S0001)	5000/A811 BR 4000 Gas ECU9, EMU9, CPM
2_1607_80_1_0_2 (X00E50212562)	5000/A910 BR 4000-05 ECU9, EMU9, ESD
2_1607_80_1_1_0 (X00E50212562/S0001)	5000/A910 BR 4000-05 ECU9, EMU9, ESD
2_1607_80_1_2_0 (X00E50212562/S0002)	5000/A910 BR 4000-05 ECU9, EMU9, ESD
2_1607_100_1_0_3 (X00E50212566)	5000/A255 BR 4000 ECU7, EMU8, SXU